




Ideal Tint

Cleaning the Glass

Cleaning the glass is the most important step in a good quality installation. Dirty windows make dirty tint jobs. The techniques for properly cleaning windows prior to film installation are as follows:

1. Wet the window with dish soap and water mixture. Using your hand or the white scrub pad, clean the glass and frame edges starting at the top and working down.
2. After scrubbing re-spray the glass and scrape the window using a razor blade scraper with a new blade. Start by scraping across the top of the window from one corner to the other. Then scrape the entire surface of the window from the top to the bottom using overlapping strokes. Scrape across the bottom from one corner to the other. (See note below)
3. Wipe the frame dry with a paper towel.
4. Spray the window and then squeegee the glass with the rubber edged squeegee from one side to the other. Remember to dry your squeegee blade. Continue all the way down to the bottom of the window.
5. Dry the top gasket at the glass edge with a new paper towel to remove any excess water.
6. Dry all the gaskets and frames with a new, clean paper towel.

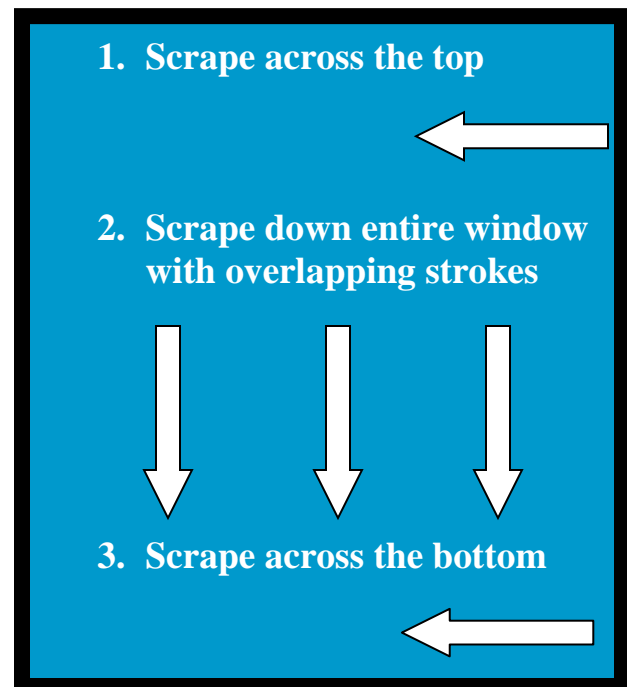

Note: When scraping do not use the scraper on dry glass. Keep the angle of the blade low. This will help prevent scratching the window. If the window is extremely dirty, spray the window one last time with soap and water mixture and use your hand to feel for any remaining dirt.